

# SCREEDIT

FLOORING SYSTEMS

UNDERFLOOR HEATING & SCREEDING SPECIALISTS

## SANDING, VACUUMING AND PRIMING YOUR NEW SCREED

Now that your new screed is dry, it's time to sand, vacuum and prime it ready for the installation of your chosen floor finish.



Remember, your floor only needs to be prepared in this way if you are having a bonded floor like tiles or vinyl which require an adhesive or smoothing compound.



FOR MORE INFORMATION OR FOR A NO OBLIGATION  
FREE QUOTATION PLEASE CONTACT **SCREEDIT**



**VISIT US**

**[www.screedit.co.uk](http://www.screedit.co.uk)**



**CALL US**

**0121 241 6691**



**EMAIL IS**

**[info@screedit.co.uk](mailto:info@screedit.co.uk)**


# SCREEDIT

FLOORING SYSTEMS

UNDERFLOOR HEATING & SCREEDING SPECIALISTS

## YOUR SANDING, VACUUMING AND PRIMING TIMELINE

Depending on the size of your room, you may need to consider induced joints.

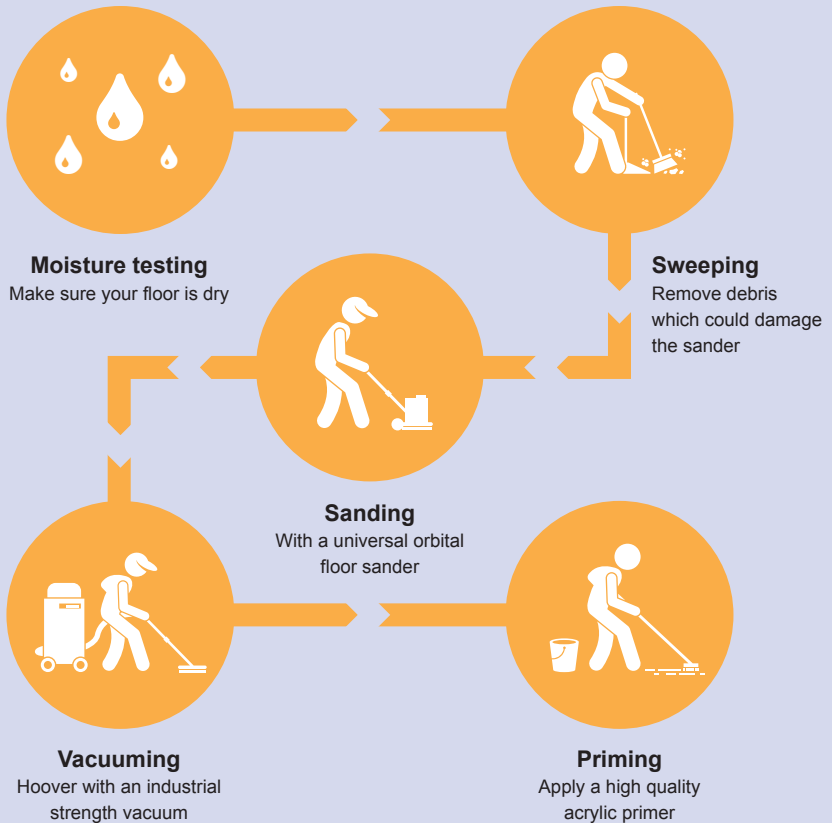

FOR A FREE QUOTE CONTACT **SCREEDIT**

 **0121 241 6691**

 **info@screedit.co.uk**

Copyright © 2020 Screed & Stone Ltd